

A Syncing Feeling?

How do you connect your Pocket PC device to your desktop so that you have the same data in both? That's where synchronization (or syncing) helps you out. It's not as complex as it sounds.

Connect your Pocket PC device to your PC using the cradle. The cradle comes with a serial or USB port in most cases. Just plug in the connector of the cradle to your PC's serial or USB port and you are ready to start syncing.

It's okay if you don't happen to have a cradle for syncing. Just connect your Pocket PC device to your PC which has ActiveSync installed, using a serial or USB connector. ActiveSync automatically detects the type of connection. It is also possible to sync using the IR port of your Pocket PC device and the one on your laptop. Sometimes syncing can be a real pain but in the case of the Pocket PC, it's a very smooth process, using ActiveSync. ActiveSync lets you synchronize almost everything on your PC with the Pocket PC device.

Syncing is also used for other purposes such as installing applications, transferring files, surfing the Net on your handheld via the connection to your PC, or using a wireless modem.

Just make sure that your PC also has a USB port, though. Refer to the manual to find out if you have a serial or a USB port. Microsoft recommends Outlook 2000, though it isn't a necessary criterion if you want to use your Pocket PC.


Now that you have all the tools with you, let's get on with installing ActiveSync on your PC.

Step 1: To start the installation, double-click on the installation file in the CD or on the one that you've downloaded.



Starting the installation

Step 2: Click on Next. Click on Change to select the drive and folder in which you want ActiveSync to be set up, then click on Next.

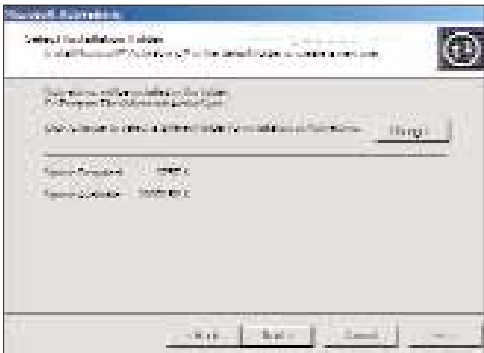

Customising your setup

Step 3: Now is the time to go live. Connect your



Towards connectivity



Windows 2000 will auto-detect your handheld

Pocket PC's cradle, with the Pocket PC on it, to the PC's USB/Serial port and click Next.

Once your PC has detected your Pocket PC device, you are all set.

In case your Pocket PC is not detected, there's no need to worry. We encountered the same problem while working in Windows 98. Restarting your computer should help it detect the Pocket PC. Installing ActiveSync on Windows 2000, however, was as easy as a song. The system detected the device the moment it was connected, without any restarts.

Towards partnership

Now that ActiveSync has been installed on your machine, let's get down to introducing and transferring data from your first love to your latest crush. It's time both your PC and Pocket PC got personal!

Click on ActiveSync. This will bring up the 'Set up a Partnership' screen. Click on the Yes button to synchronise all the data on your Pocket PC and your desktop computer. The No button is used in case you are using someone else's



First steps towards partnership

computer and don't want to synchronise your data, but only want to do a manual transfer.

Follow the prompts, up to the very last step, to set up your first partnership and click on Finish to complete the process. Now ActiveSync automatically synchronises data between your PC and Pocket PC. It automatically

Find it on

digit

interactive

Software

Microsoft Reader, Adobe eBook Reader, check out

Mindware