

30 Minutes Expert Rely on the Net


You just bought a Reliance cell phone, but are a little confused about how to connect it to your laptop or PC for Internet access. We show you how to do it in 30 minutes flat! Let's get started.



Enter the username and password in the dialer

The first thing you should do is get a data cable to connect your handset to your computer. Most data cables have either of two interfaces—Serial (COM port) or USB. We recommend a USB interface, for the sheer ease of installation and use. Make sure you get an original, manufacturer-recommended data cable for your cell phone model.


Next, in Windows 98 or Me, install the Dial-up Networking and TCP/IP protocols for the Dial-up adapter. To do this, go to **Start > Settings > Control Panel** and open Add/remove Programs. Click on Windows Programs, select Communications and click on Details. Check Dial-

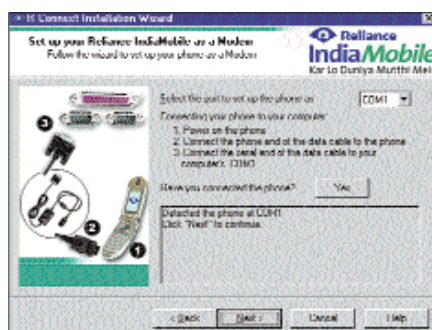

Select the model and the port to which it is connected in the wizard correctly

up Networking and click OK twice. Now, from the Control Panel, open Network and click on the Add button. Select the Dial-up adapter and click OK to install it. Next, click on Add, select the Microsoft TCP/IP protocol and click OK twice. The setup will prompt you to insert the Windows installer CD, do this and reboot your computer when the installation is done.

Insert your R Connect CD after your PC restarts, and start the Installation wizard. Click Next at the Welcome screen, and select your handset's make and model number. Set the cable type to USB or Serial, as per the cable you have. Here we used a Serial data connector, as it is the cheaper and more popular data

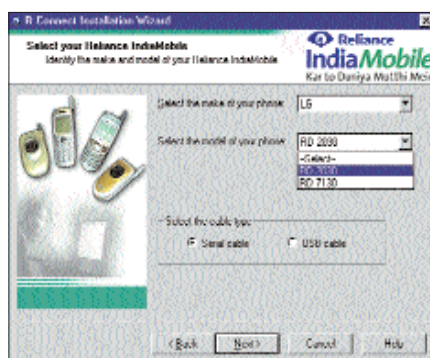

Select the port to which the phone is connected

cable interface. Before connecting the cable to your phone, you have to set your phone to work as a modem. Type in '*412' and press the call button. You will receive a confirmation SMS that tells you that your phone is now ready to be used as a modem. Now you can connect your PC to the phone via the data cable.


Continue the R Connect installer wizard by selecting the COM port that your phone is connected to—either COM1 or COM2. Click on Yes and the phone will be detected—if it isn't, choose the other COM port and click Yes. After the phone is detected, press Next and all the necessary drivers will be installed. The phone will now be displayed as a modem in Windows. You will



Restart your PC after installing the R-Connect software

be prompted to restart you PC, so close all applications and select 'Yes, Restart Now'.

After the reboot, the Reliance dialler will pop up, and ask for the username and password. If your mobile number is (+22) 3101 XXXX, then your username and password will be 223101XXXX. Enter the number accordingly, and hit Connect—the connection will be established almost immediately.

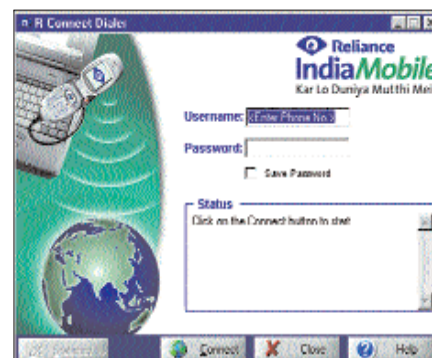

Enter your username and password in the dialer box and click Connect

You can set Internet Explorer to always use this connection from **Tools > Internet Options > Connections**. Now, you will get Internet speeds between 40 Kbps to 80 Kbps, but also remember that this service is a battery hog—a fully charged phone battery will only last for about 30 minutes of continuous connectivity.

NIKETU SHAH
niketu_shah@thinkdigit.com