

Speed 2 or *Project IGI*, stating that System Zone2 has exceeded its temperature limit. What is System Zone2 and how do I solve the problem?

Ashish Yadav

System Zones refer to specific areas on your motherboard where important chips are located. System Zone1 refers to the area near the PCI expansion slot, and System Zone2 refers to the area where the system RAM is located. The error message occurs if the warning temperature for the Active Monitor program has been set too low for your system. You need not worry as long as your PC doesn't crash after playing games. Simply set the warning temperature a little higher in the monitor program.

3D device missing

I have an nVidia Riva TNT2 graphics card on my Pentium 4 1.5 GHz system with 128 MB SDRAM running Windows XP. I can play *Cricket 2002* and *Fifa 2000* properly on my system. However, ever since I changed my cabinet's position, all my games showed up error message saying that they required graphics acceleration. Also, though the Device Manager lists the graphics card, it does not show up in the 3dsetup of the games. Installing the latest drivers did not help. What do I do now?

Rakesh Khan

Looks like you will have to go in for a clean install of your graphics drivers. First un-install them from **Start > Settings > Control Panel > Add/Remove Programs**, reboot your PC, and when Windows prompts you, select your card type as 'Standard VGA'.


Now, restart the system, install the latest drivers and reboot. Next, install the latest version of DirectX and reboot your system one last time.

Since you've changed the location of your unit, there's a possibility that the jerks it experienced might have loosened a card or two. So, check the RAM sticks and AGP card to make sure they're seated firmly.

Turning off Windows file protection

I have a PC running Windows XP Professional. Instead of using Style XP, I replaced Windows uxtheme.dll and also the system32.dll.

When I rebooted my computer, a Windows file protection error message appeared, stating that certain files that were required to run Windows properly had been replaced and needed to be restored. Thereafter, it asked for the Windows XP installation CD. I cancelled the message and ever since then, I get the same error whenever I reboot my

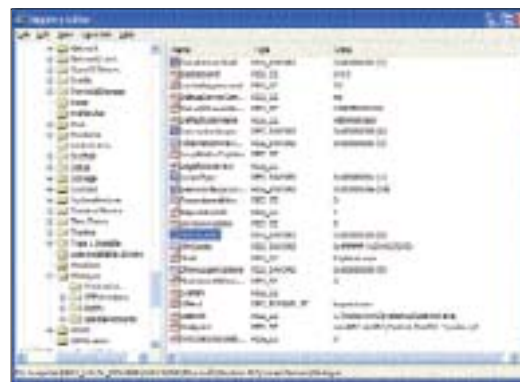

You can turn off File Protection by editing the registry

PC, or try to access the CD-ROM drive. Sigh... Do I have to live with it all my life?

David Lalsama

No David, you don't. The best option here is to load the Windows XP installation CD when prompted, and allow Windows to restore the missing files. Of course, you can also disable Windows File Protection—the system that prevent users from deleting system and program files by editing a registry value. Be very careful when you do this.

Go to **Start > Run** and type '**regedit**', navigate to the SFCDisable key in '**HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows NT\CurrentVersion\Winlogon**' and edit it to hold the value '0xFFFFFFFF'. If you want to re-enable File Protection, just reset this value to '0'.

Installing Windows 2000 Professional

I am unable to install Windows 2000 Professional in MS-DOS mode. I had to install Windows 98 SE first, and then upgrade it to Windows 2000 Professional. Is there a way to install Windows 2000 Professional without having to follow this procedure?

Amey

Yes, there is. You can install it directly using a bootable Windows 2000 CD. To change the boot sequence, re-start your PC and press [Del] ([F2], or [F12], depending upon your motherboard), to enter the CMOS setup. Change the first boot option to CD-ROM and keep the hard disk as the second boot option. Now boot your PC using the Windows 2000 CD. The setup should start automatically.

If you do not have a bootable Windows 2000 CD, you can still install it using a bootable Windows 98 CD. First, boot into MS-DOS using the Windows 98 CD. Next, swap the Windows 98 CD with

Incorrect temperature readings

I have a Pentium 4-based PC with an Intel D850GB motherboard. During normal operation, Intel Active Monitor shows the 65 C - 66 C temperature in System Zone1 whereas the safe temperature indicated is 50 C. What needs to be done to reduce the temperature? I have an ATX cabinet and I have an additional fan installed next to the SMPS but apparently, it does not circulate much air.

Murli



ILLUSTRATIONS: Mahesh Benkar

You are facing this problem because of the older BIOS that provides incorrect information to the Intel Active Monitor. You need not worry about your system being overheated unless the system shows any

odd behaviour, such as frequent system crashes. Update your BIOS from the Intel Web site (www.intel.com), and the problem should be solved.

As for keeping the system cool, just ensure that you are using a good-quality

SMPS such as Antec, and always opt for a large and roomy cabinet.

Check the orientation of the installed fan.

One fan should expel hot air from the case, while the other draws in air from the outside. If both the fans drive air in

the same direction, it'll actually increase the internal temperature. Clear the airflow path of the processor fan by securing the IDE and power cables with a rubber band or string.