

Q&A

Your Questions, Our Answers

Intranet And FTP

Q I am an employee in BSNL. We work on our intranet with dial-up. We got a new HCL Busybee PC with Windows XP Pro version. The problem is that I am not able to run the FTP command at the DOS prompt mode. The message I keep getting is "FTP is not recognised as an internal or external command, operable program or batch file." How do I get the command ftp to run at DOS prompt, so that I can send or receive file from our intranet FTP.

Kiran


A The FTP command requires that either the file FTP.EXE be present in the folder from where the command is run or that the path to that file is present in the PATH environment variable. FTP.EXE is installed by default with every Windows XP installation to the System32 folder in the Windows directory. The reason for the FTP command not working on your computer could be due to this file being corrupt or the file may have been deleted. You can copy this file from any Windows XP PC from the location mentioned earlier to the System32 directory of your machine, and the FTP command will start working again.

What Is My Server Type?

Q I have a problem with Outlook Express. When I create an account, it asks for the type of server. I don't know what type my server is. What should I enter?

Bapi Roy

A The incoming and outgoing mail server to be specified in Outlook Express depends on the mail provider and your Internet Service Provider (ISP). While the incoming mail server depends on the mail service provider that has provided your e-mail ID, the outgoing mail server depends on your ISP. Since you have not provided your e-mail ID, we advise

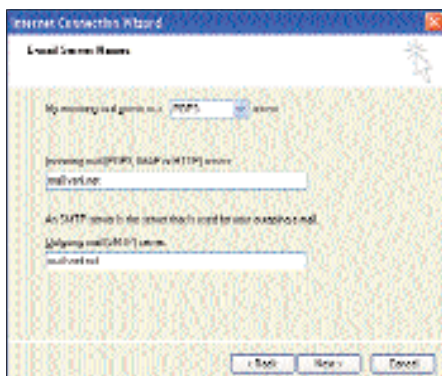

Setting up the incoming and outgoing mail servers in Outlook Express

you to contact your ISP for your outgoing server, which is also known as POP (Post Office Protocol) server and if your e-mail provider is different from your ISP, you will have to contact that provider for the incoming server which is also known as the SMTP (Simple Mail Transfer Protocol) server.

Live Update Led To Deletion

Q I own a Compaq Presario M2000 Series laptop. I have been using Windows XP Home Edition Version 2002 Service Pack 2. I am using the CMD Command Prompt (DOS-based). Till recently, all my DOS applications were working fine. However, after a Live Update operation, a file named AUTOEXEC.NT in C:\Windows\System32 folder, was deleted automatically. Now, I had to copy this file from C:\Windows\System32\Dllcache.

However, whenever I restarted the laptop, it always deleted the AUTOEXEC.NT. I have also tried the 'System Restore' option from HP but to no avail.

Dipak Sheth

A You do not need to set the environment variables in Autoexec.NT and Config.NT. There is an easier way to set the environment variables in Windows XP/2000/2003. Open the 'Control Panel' and open the 'System Properties'. Alternatively, you can bring up the 'System Properties' by pressing the 'Pause'/'Break' key while keeping the Windows key pressed. Now, navigate to the 'Advanced' tab and click the 'Environment Variables' button near the bottom of the window.

Here, at the top, you can set user variables for the current user only by clicking on 'New', entering the variable name and value and clicking 'OK'. To modify a variable, click on the variable and click 'Edit' and modify the name(s) or value(s). To delete a variable, click on the variable and then hit 'Delete'.

At the bottom, you can set global environment variables, which are applicable to any user who logs into Windows. You must belong to the Administrator group in order to be able to set new variables or modify any variable. As always, you need to restart Windows for the changes to take effect.

The Space Saga

Q I have a Celeron 1.7, Windows 2003 Server with Exchange Server 2003 installed. Problem is, when my PC restarts, its root partition C: has around 400 MB free space. But, as I run any applications, the space gets filled and after some time, it is "0 Bytes". I also checked for any Log or .tmp files, viruses, but everything seems OK. What could be the cause and what is the solution?

Prasad Thombre

A Windows 2003 Server requires a page file, which is nothing but a swap file located in the root partition—usually the C: drive, in order to function smoothly. The page file is utilised as