




ATX Motherboard Power Connector



ATX 12V Motherboard Power Connector

also needed to get a motherboard that specifically used that kind of power supply. These motherboards cost significantly more.

The images on this page should reduce the confusion about what type of power supply you have. The differentiating factor is the type of power connectors that connect to the motherboard from the power supply.

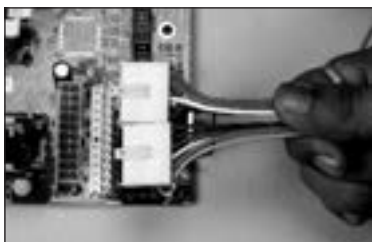

AT Motherboard Power Connector

Look at the images, and then look inside your case. It should then be clear what type of case you have. For either type, you will need to remove four to six screws on the back of the case. In most AT cases, the metal plates covering the tower will come off completely once the screws are removed and the sleeve is slid on the outside.

For ATX cases, it is a bit different: the sleeve on each side has to be removed individually after the screws are removed from the back of the case.

Desktop cases are a different species: they can have both ATX and AT power supplies, and you cannot just look at a desktop case and say what kind of power supply it has. You can only do that after you have opened the case. Another thing is opening a