


computers. However, not everybody has a wireless card installed in their computers. So now we'll show you how to create a local area network (LAN) connection between two computers.

1. First of all, you need to go out and buy the straight patch Ethernet LAN cable (make sure that "patch" or "crossover" is written on the cord) and connect them to both computers.
2. Go to "Network and Sharing Center" through the Control Panel, just the way we did while setting up the wireless connection.



The Network and Sharing Center

3. Select "Network Connection" and right-click Local Area Network connection and select "Properties". Now select "Internet Protocol Version 4(TCP/IPv4)" and click "Properties".
4. Now once you're inside the TCP/IP properties of your computer, click "Use the following IP" and enter 192.168.0.1 as IP address and 255.255.255.0 as subnet mask. Leave the other details blank and click "OK".
5. Now go to TCP/IP properties of

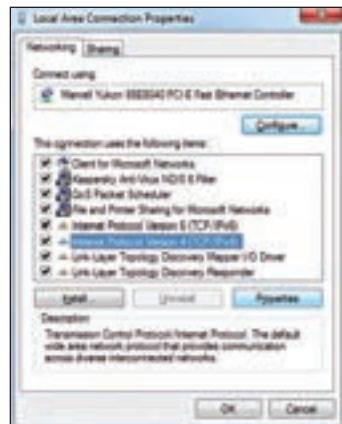

Local Area Connection Properties