

fied® TV. After that you can transfer and store the videos on your DLNA Certified® network attached storage (we'll explain NAS in detail later on).


Getting your hands dirty

So now it's time to get down to the basics, and set up the connection that will enable you to do all the cool things we've described above. In this section, we'll be showing you how to connect your LCD television to your home network with a wired ethernet connection.

First of all, you need the following equipment:

1. An internet connection.
2. A router (If you're connecting more than just the TV to your internet connection).
3. An ethernet cable long enough to connect from the TV to your router (or ethernet wall jack).

After you have all of the above equipment, follow these steps:

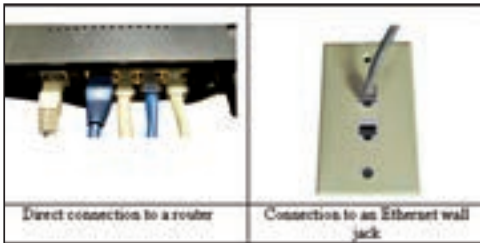

Connecting the Ethernet Cable



Connecting the Ethernet Cable to the LAN

1. Connect the ethernet cable to your router, modem, or wall ethernet jack.
2. Connect the other end of the ethernet cable to the LAN port on the back of your TV.
3. Press the MENU button, and use the directional arrows to select "Setup"
4. Select "Network".
5. If Network Type is set to Wireless, select "Network Type" and then select "Wired".
6. Select "Network Setup".
7. Select "Internet Protocol Setup" and then select "Auto".



The Setup Option



The Network Submenu