



Foldable 5G phones by Huawei

Huawei is planning to release a foldable 5G phone in 2019 which will be powered by its own Balong 5G01 chip. <https://digit.in/nov18-80-1>



Microsoft Github acquisitions approved

Microsoft's \$7.5 billion acquisition of the open-source software repository GitHub has been approved by the EU. <https://digit.in/nov18-80-2>


PC Troubleshooting Checklist

Anything wrong with your PC? Here's how to go about finding the problem and solving it.

No power


Did you check/try:

- If the connected power outlet works?
- If all the required switches (UPS, power button) are turned on?
- If connecting directly to a wall outlet helps?
- If the input voltage for the power supply unit (PSU) matches the appropriate voltage for your country?
- If the power cable connecting your PC to the power source works?
- If the motherboard lead from the front panel is connected to the right point?
- If the power switch functions properly by shorting or jumping the power pins on the motherboard directly?
- If the power supply unit is properly connected to the motherboard?
- If the CMOS battery is dead? Replacing it would fix the problem.
- If your PSU is dead? High pitched noise (coil whine) or a burnt smell is a sure sign.
- If your motherboard is dead? Replacement is the only option.

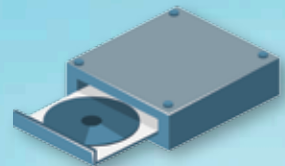

Powers up then dies

- If you get a beep code, check the troubleshooting guide of your motherboard manufacturer
- Check for electric shorts inside through loose screws, exposed wires.
- Get your PSU tested.
- Check the power button connectivity.
- Reseat everything in this sequence- Keyboard>mouse>cables>memory modules>expansion cards>CPU
- Remove all non-essential hardware. If this works, check each device by connecting it individually. Replace faulty device.
- Replace essential hardware one by one to identify trouble or use POST card.

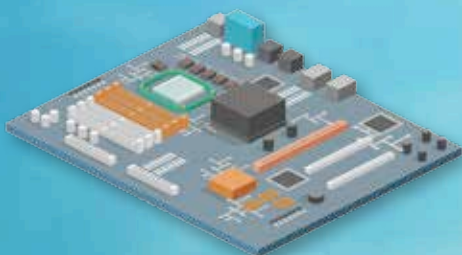

Powers up, shows something, then stops/freezes/reboots

- Check for BIOS error messages to decide the next steps.
- Clear CMOS.
- Remove any USB drives and restart.
- Follow all steps for 'powers up then dies'.

